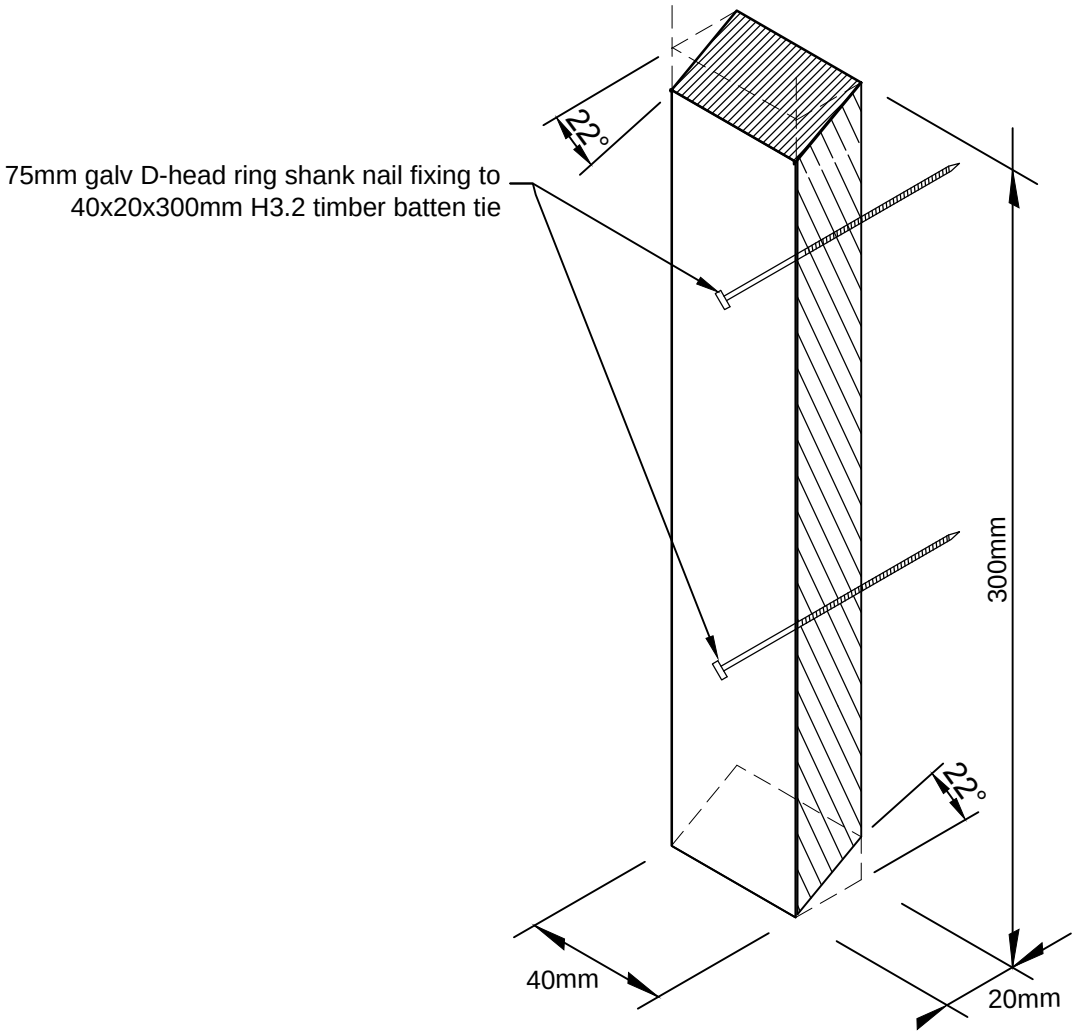


# CELCRETE BATTEN TIES - 20mm CAVITY

H3.2 timber
CAD REF 2-3
SCALE 1:10

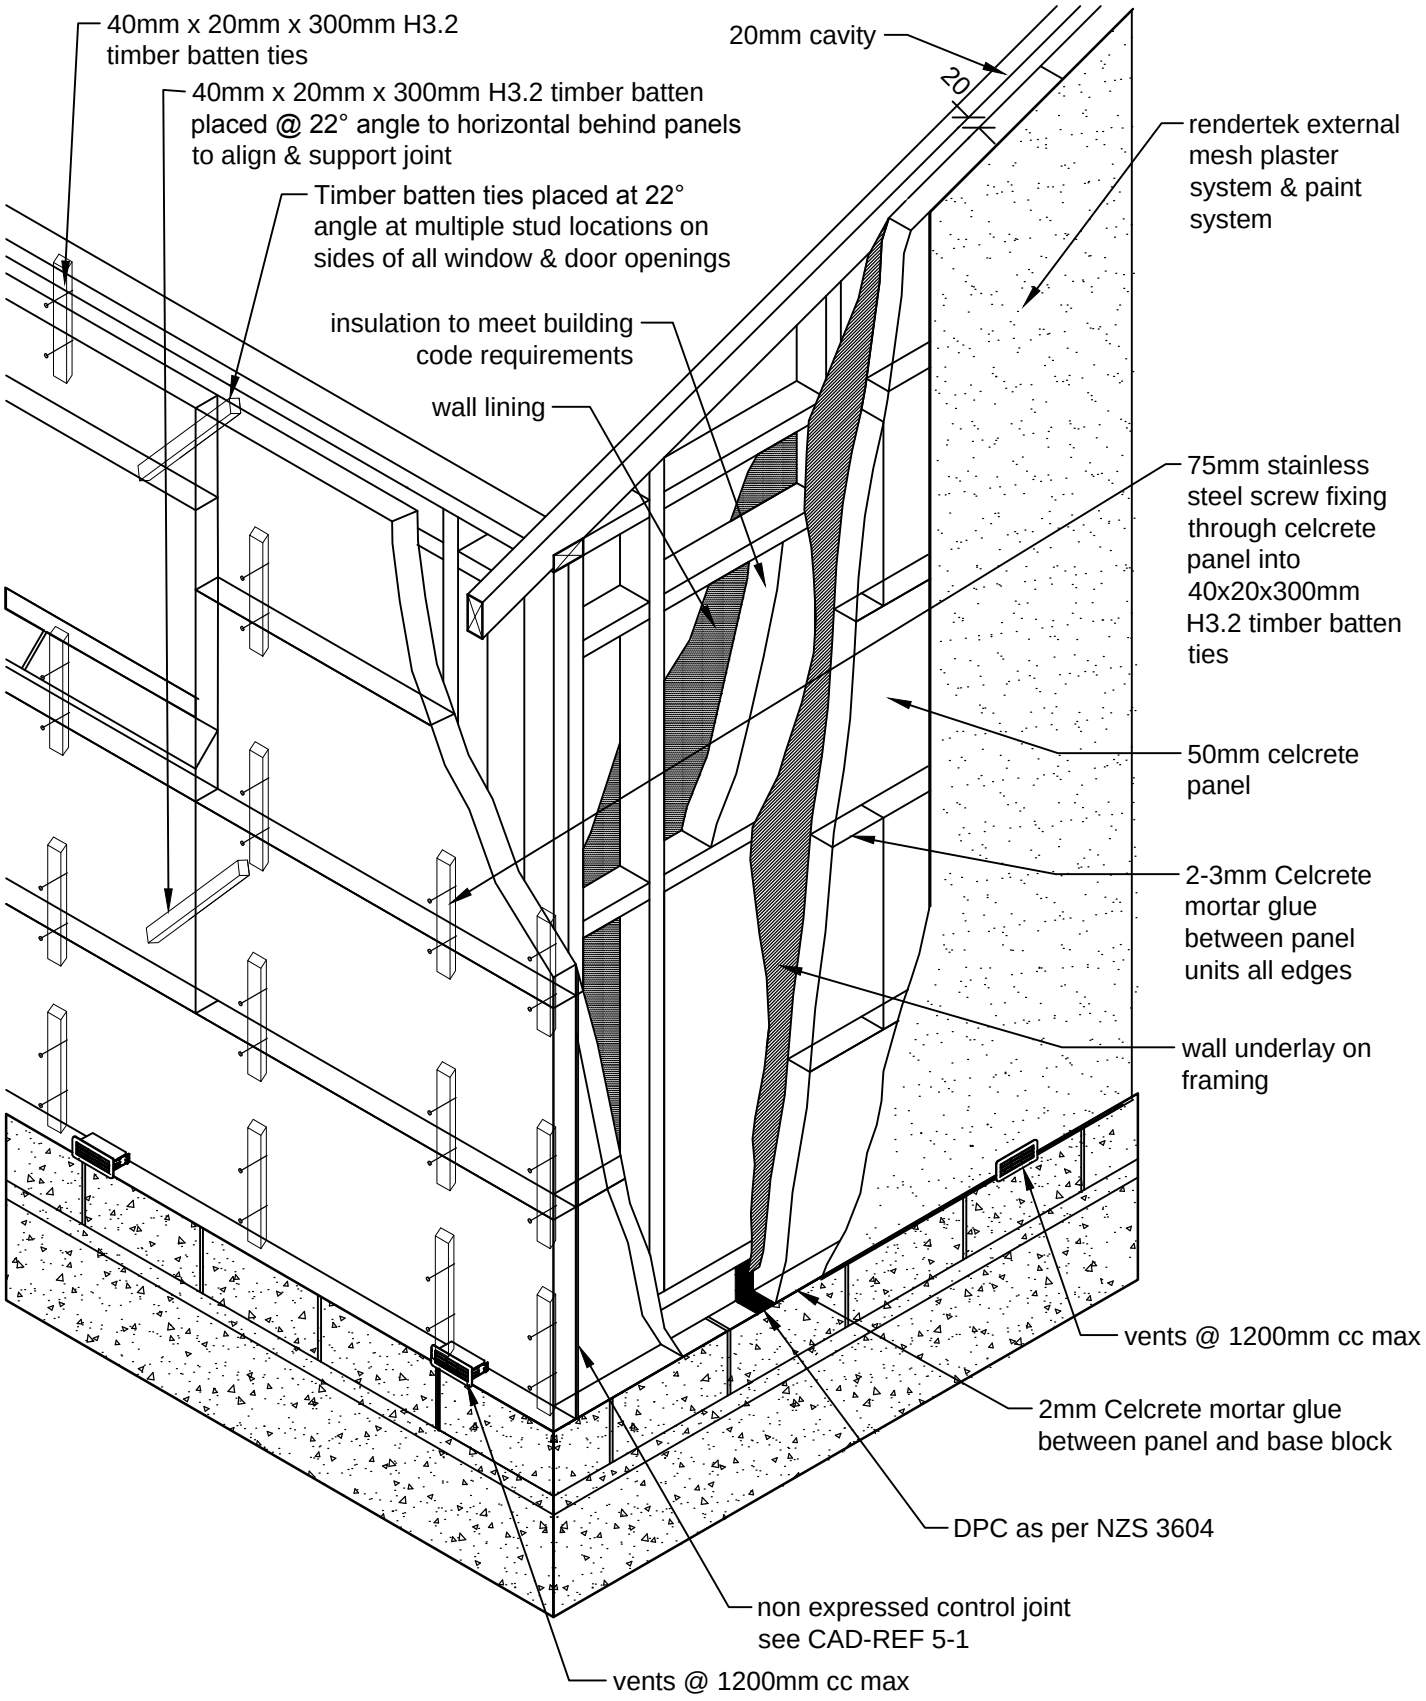


# CELCRETE 50mm PANEL VENEER SYSTEM FIXING DETAILS - 20mm CAVITY

CAD REF 3-1 - 20
SCALE 1:20

Celcrete Panel Veneer System
Issue Date: Sept 2012

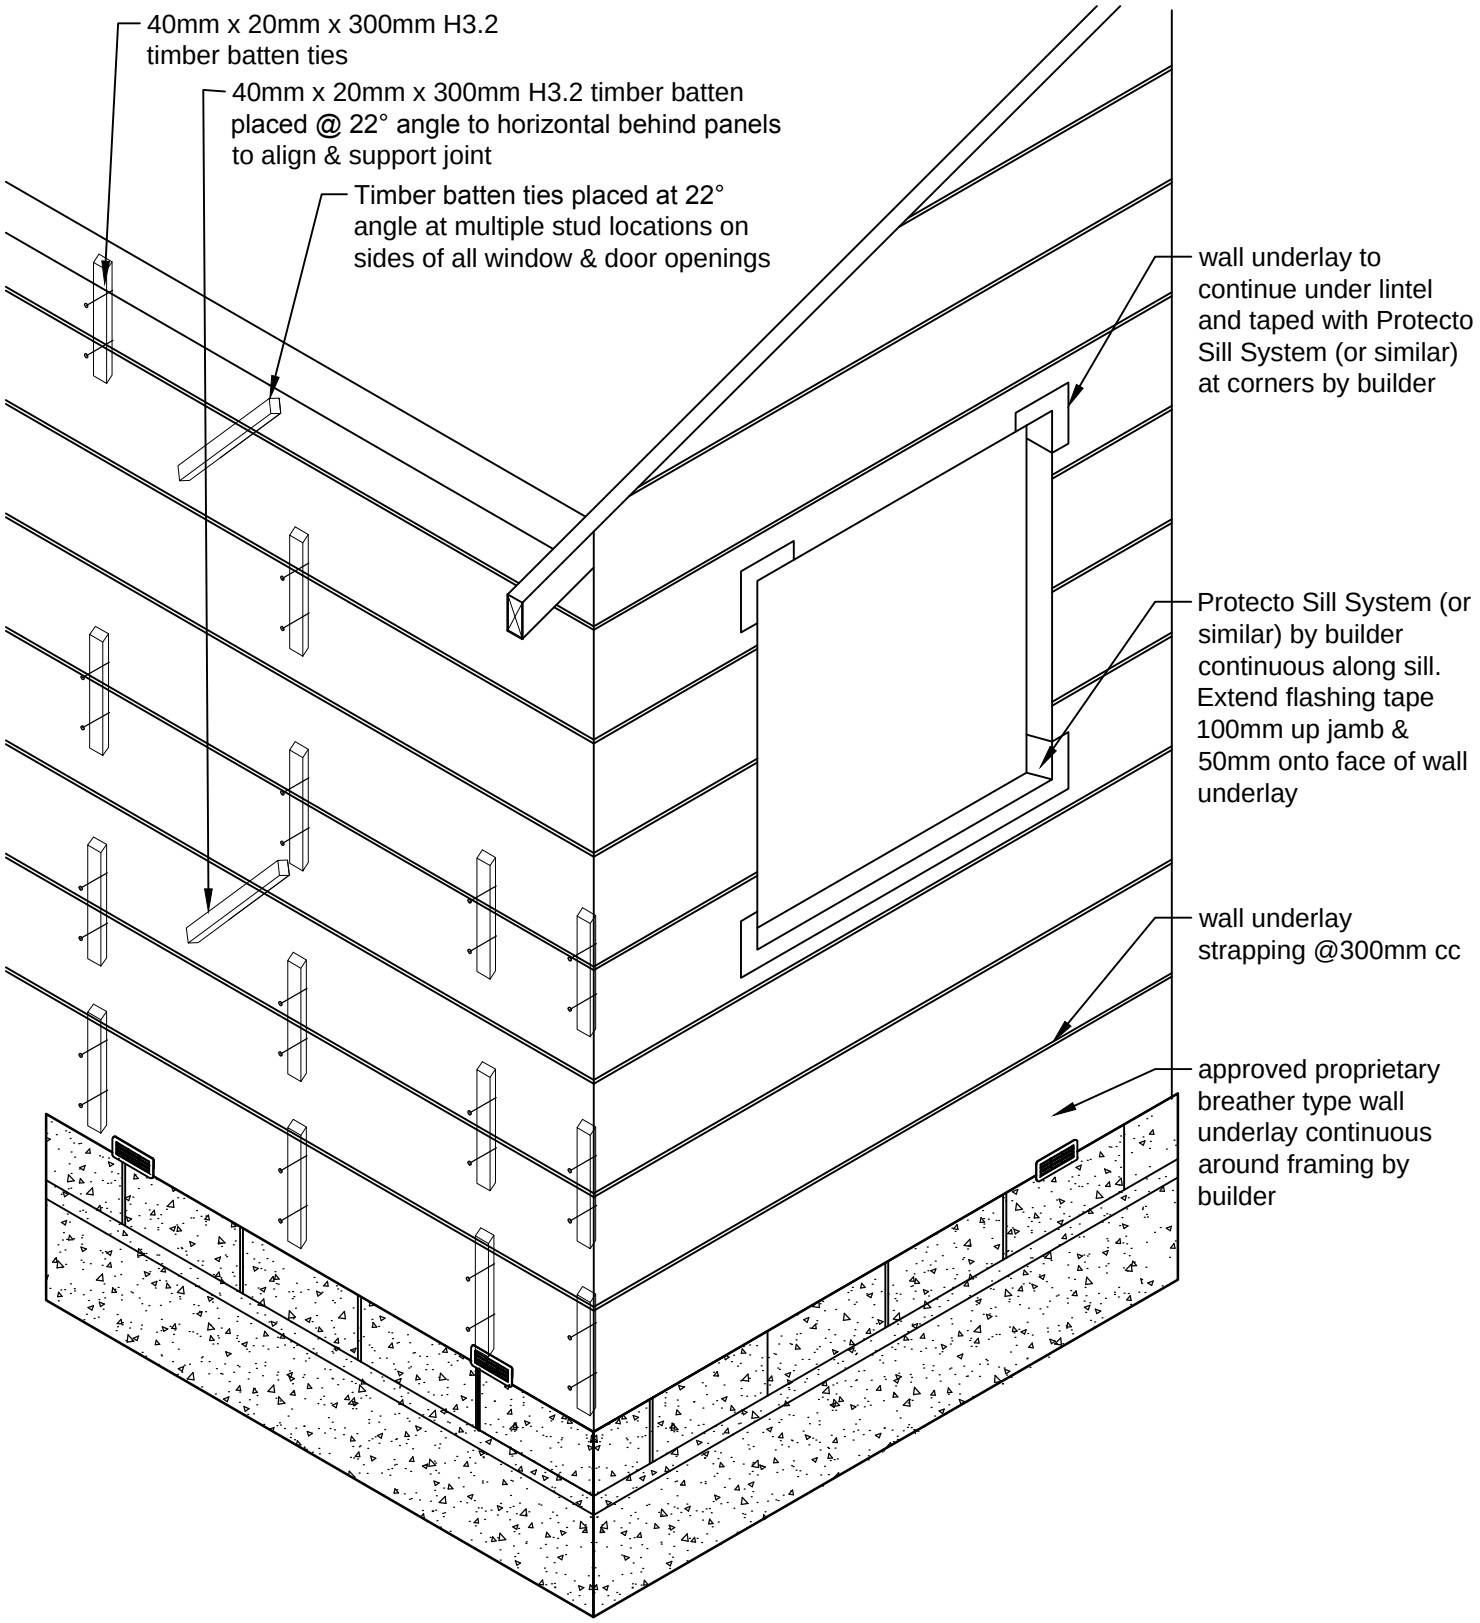


# CELCRETE 50mm PANEL VENEER SYSTEM FIXING DETAILS - 20mm CAVITY

CAD REF 3-1-a - 20

SCALE 1:20

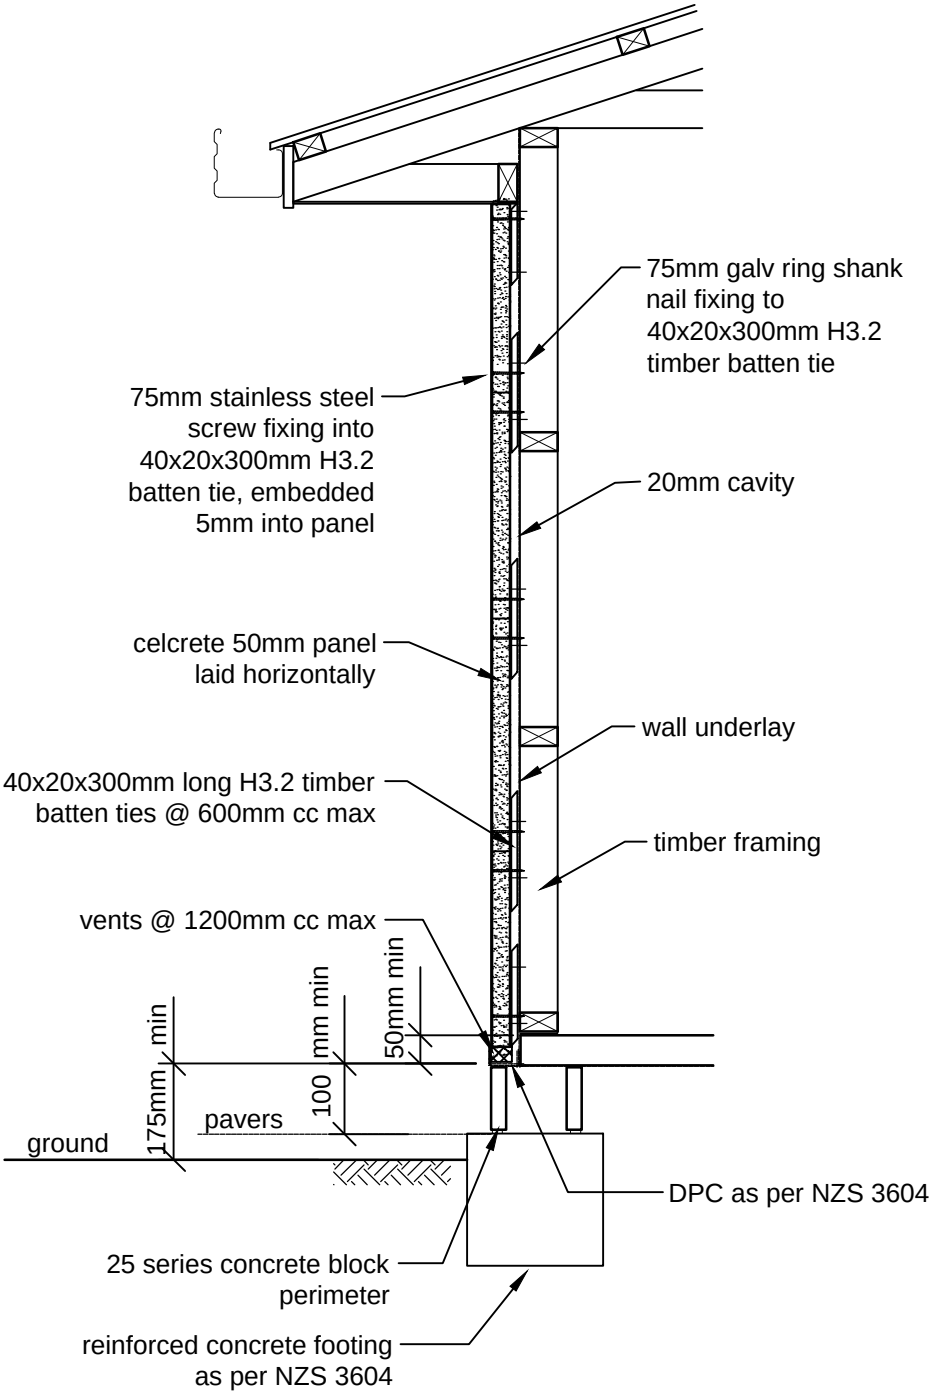


# SINGLE STOREY SECTION - 20mm CAVITY

CAD REF 3-2 - 20

SCALE 1:20

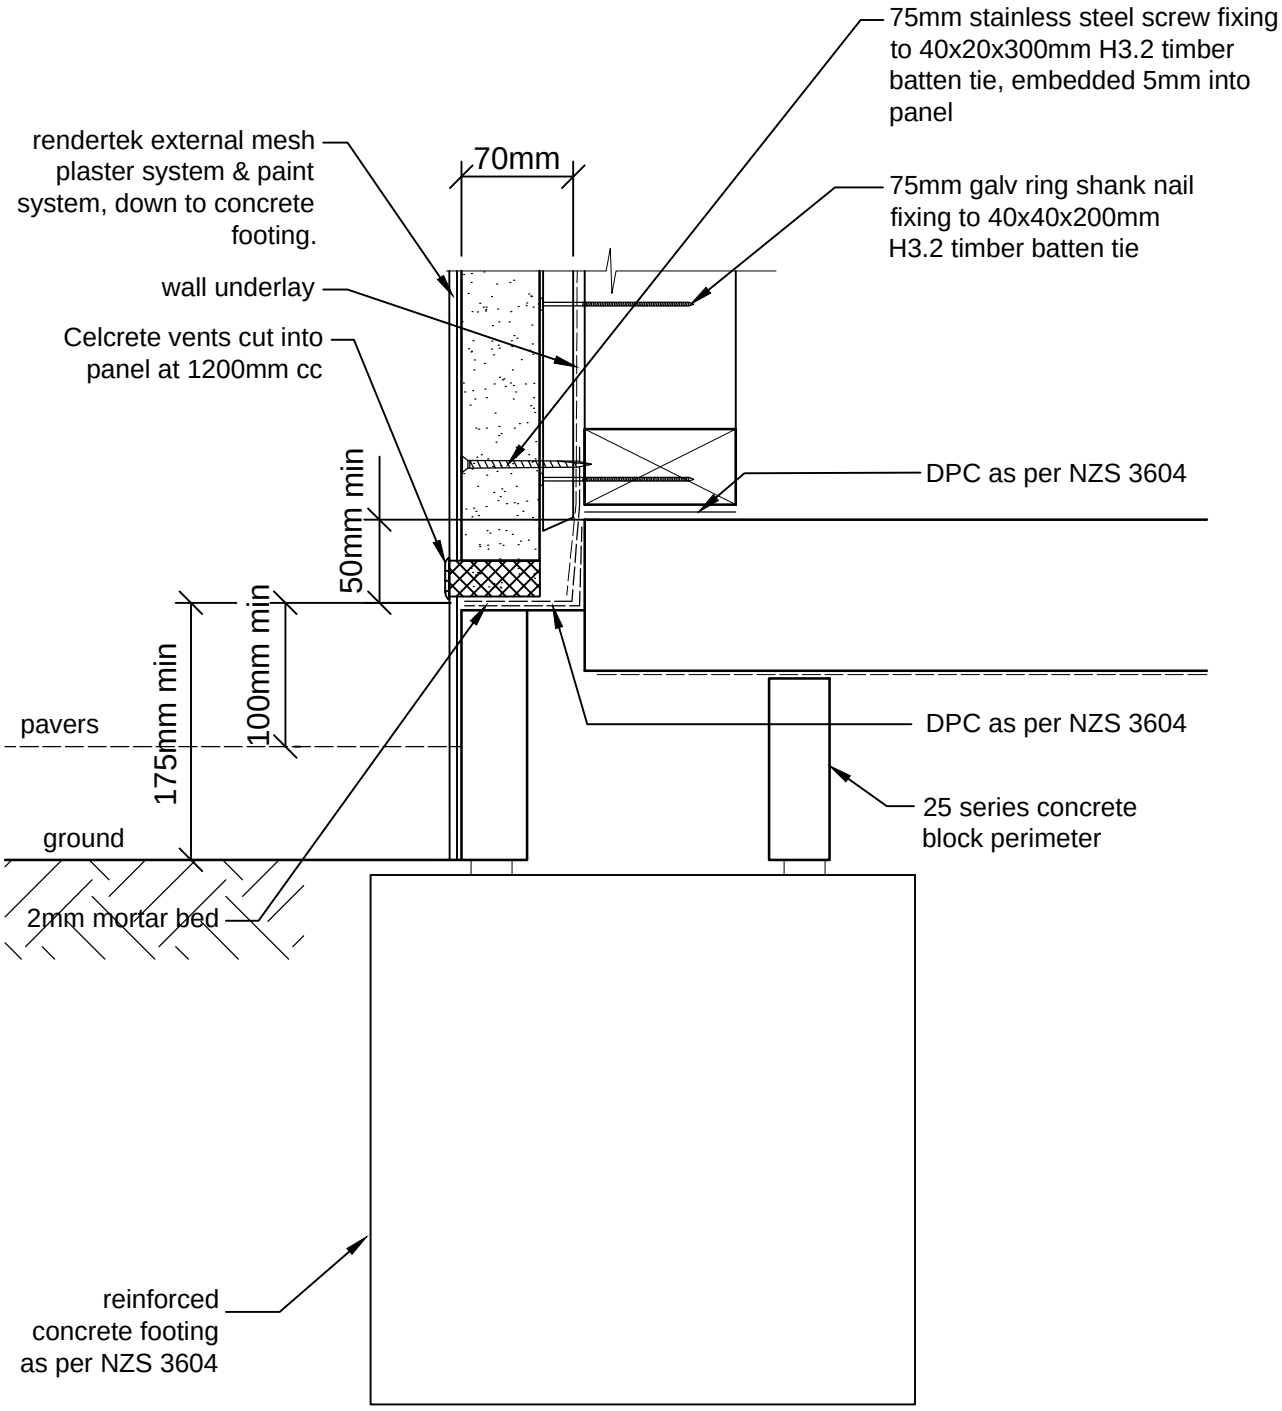


# REBATED STEP-DOWN FOOTING DETAIL - 20mm CAVITY

CAD REF 4-1 - 20
SCALE 1:5

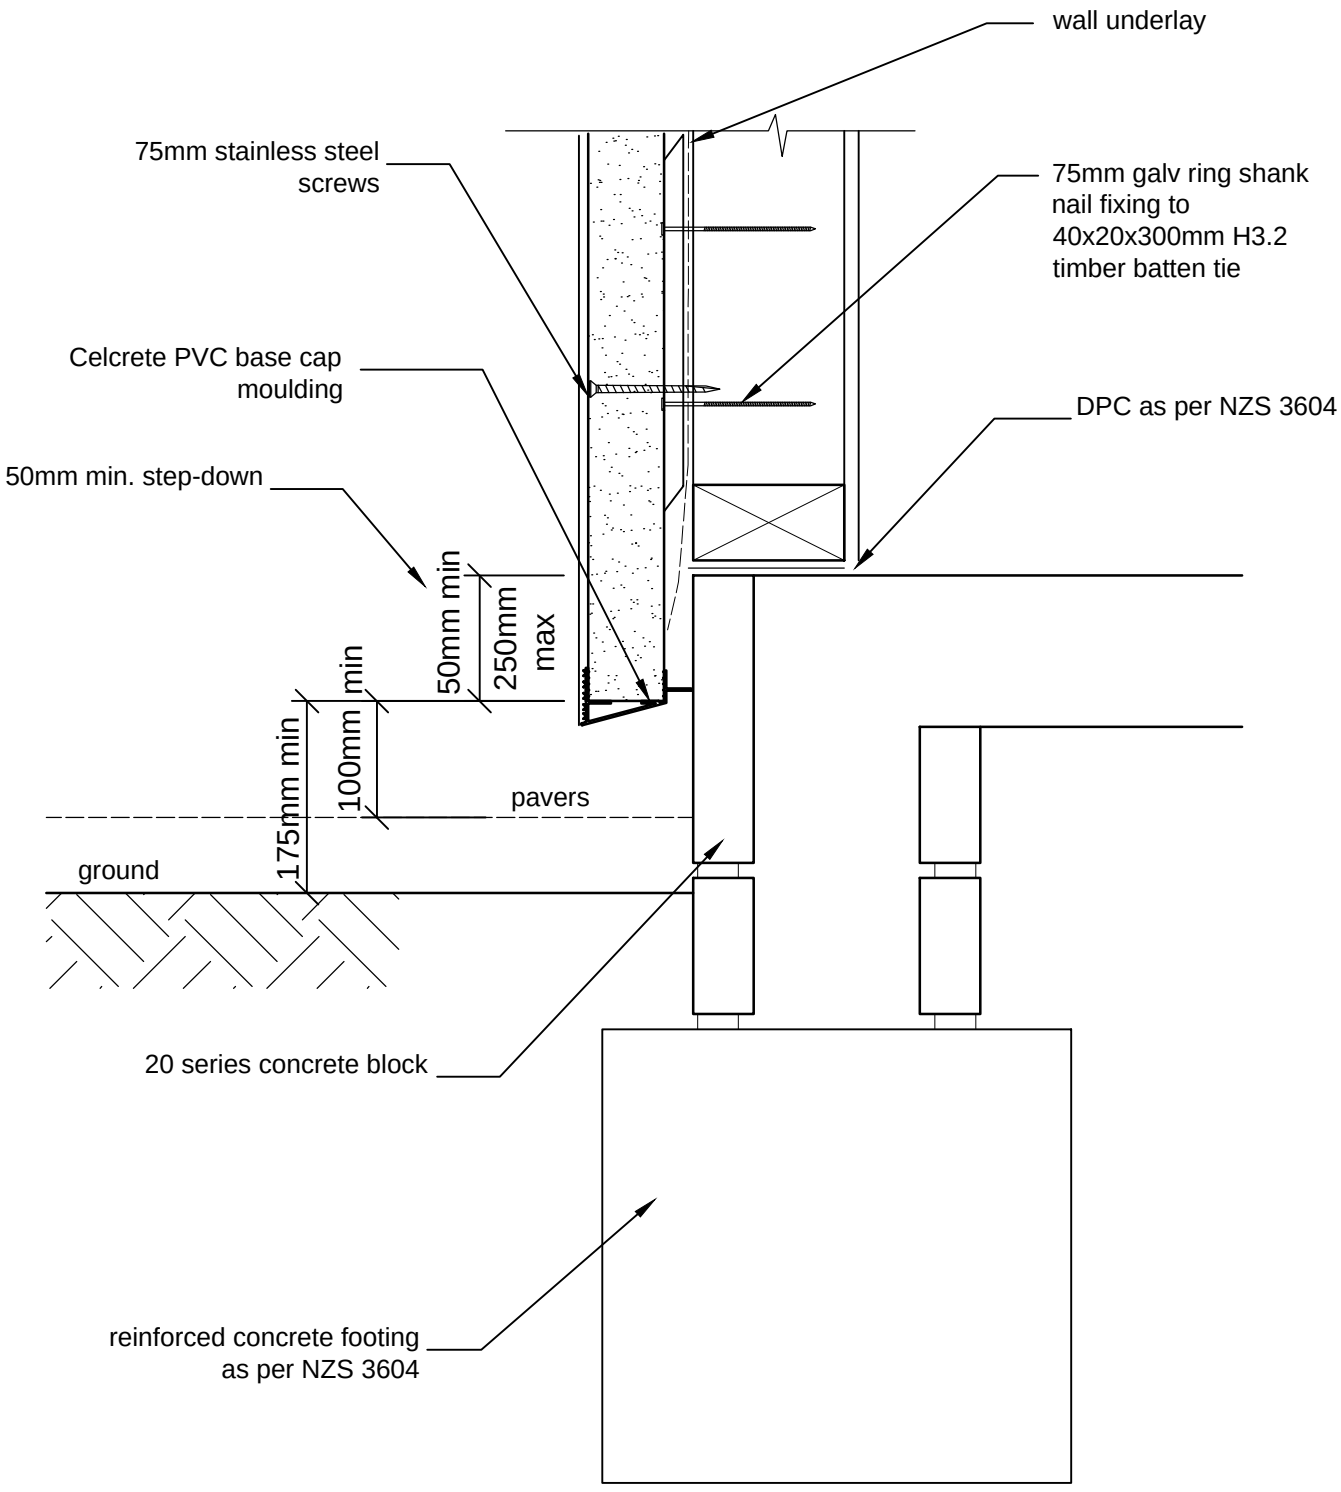


# OVERHANGING FOOTING DETAIL - 20mm CAVITY

CAD REF 4-2 - 20
SCALE 1:5

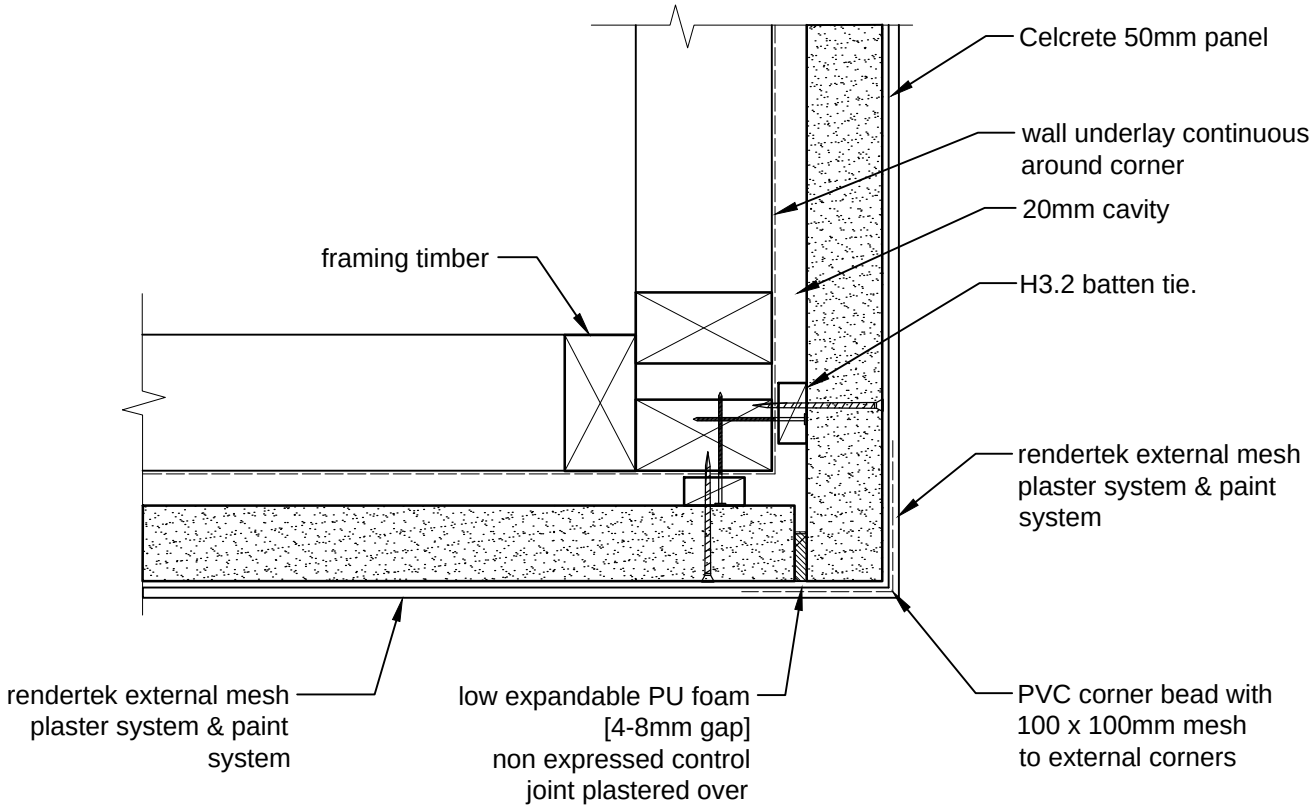


# CELCRETE PANEL  EXTERNAL CORNER JUNCTION - 20mm CAVITY

CAD REF 5-1 - 20
SCALE 1:5

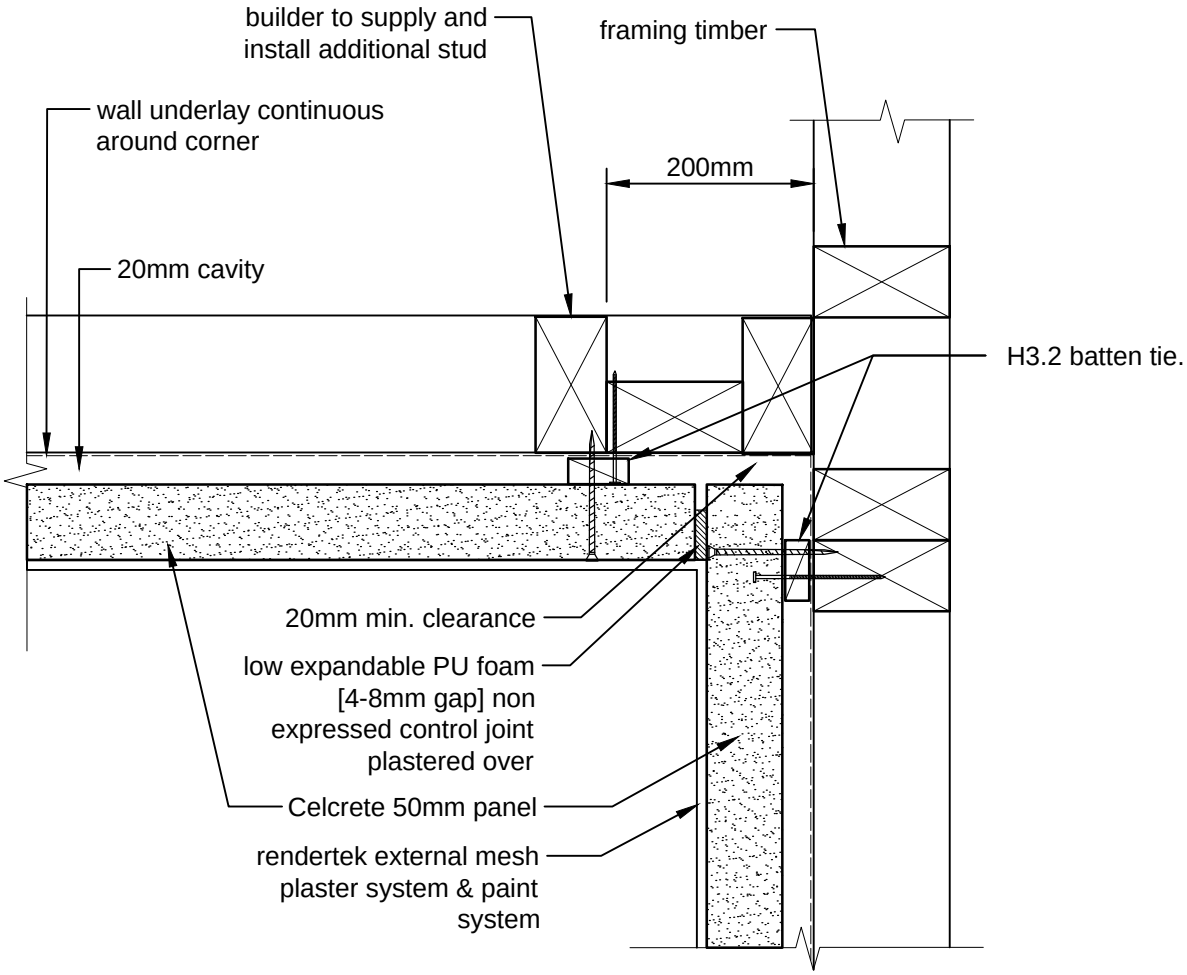


# CELCRETE PANEL INTERNAL CORNER JUNCTION - 20mm CAVITY

CAD REF 5-2 - 20
SCALE 1:5

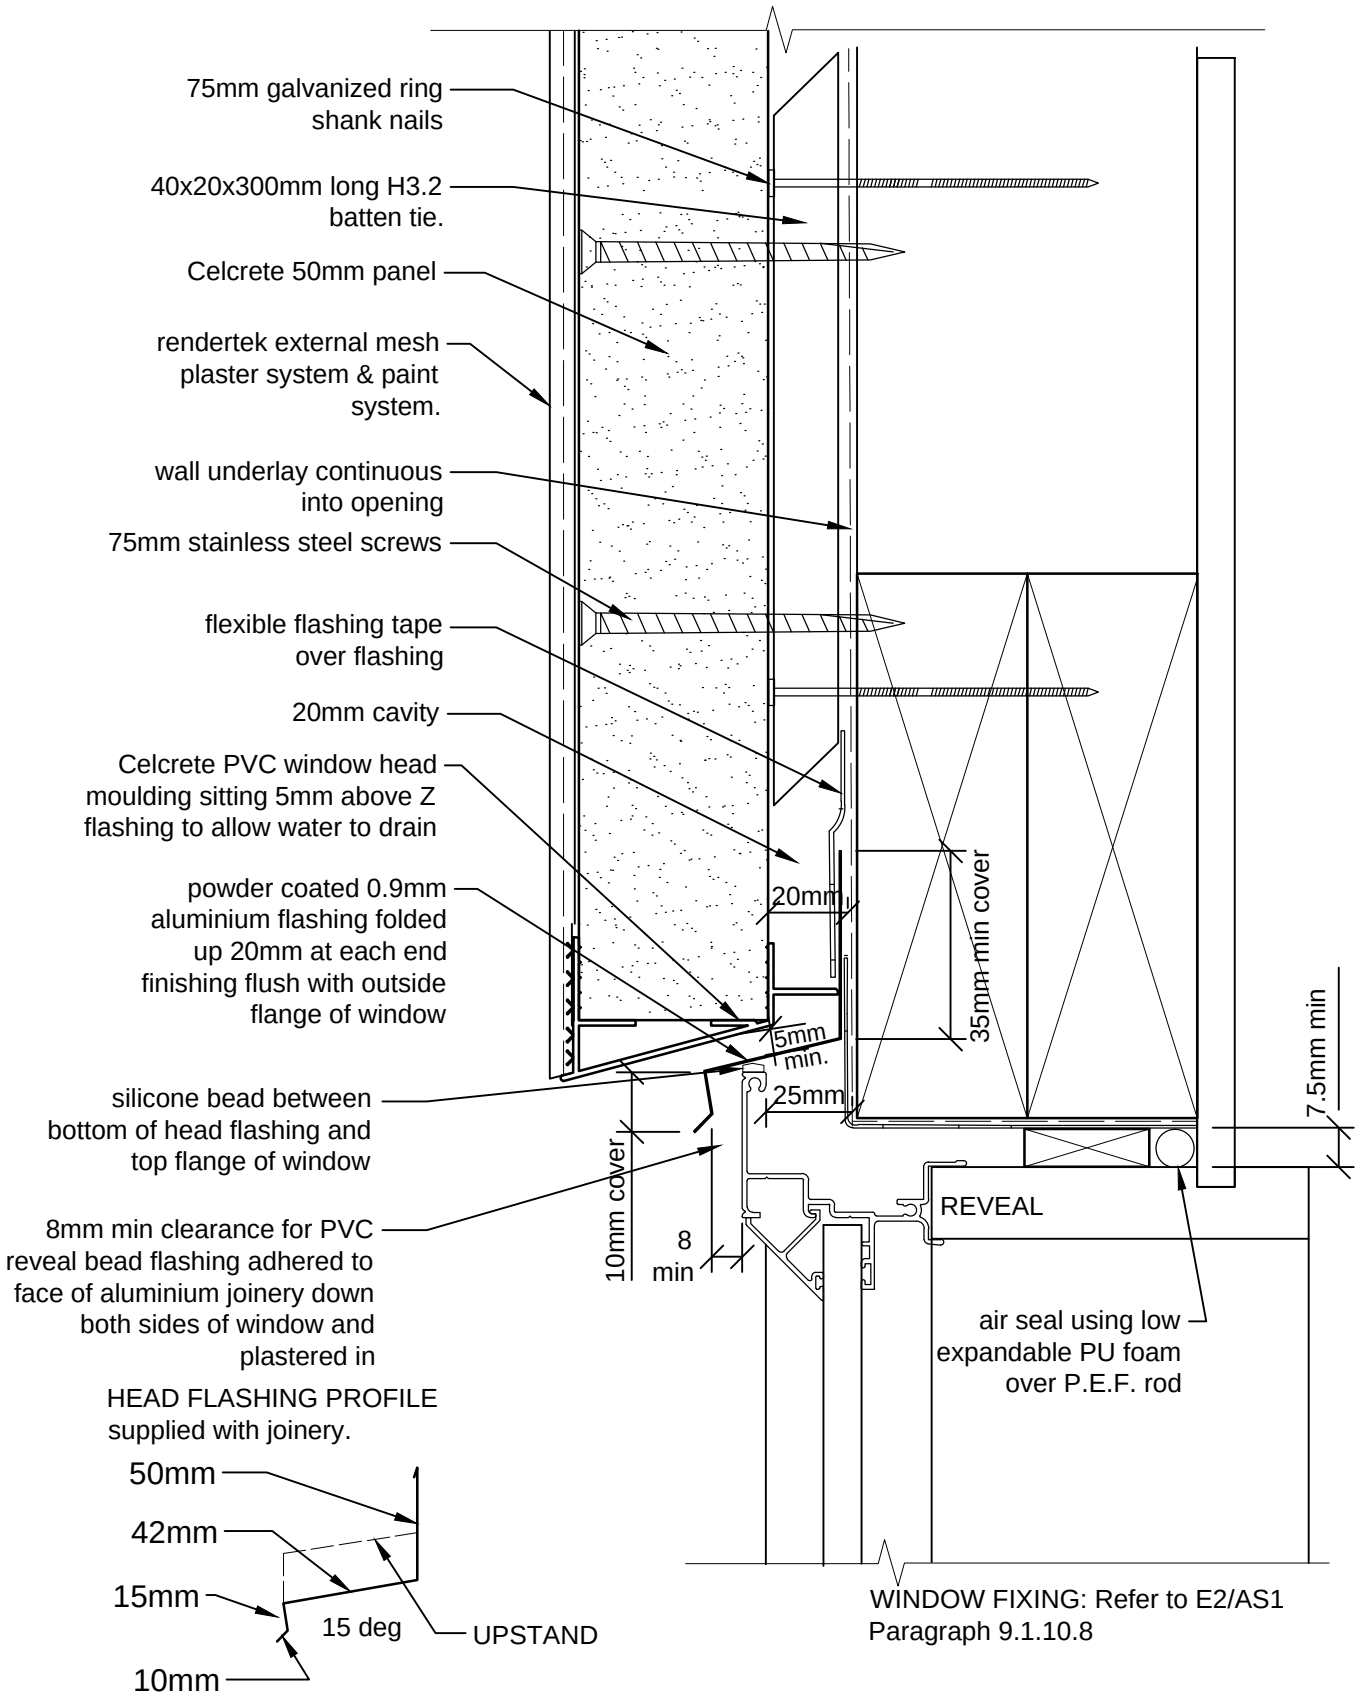


# ALUMINIUM WINDOW HEAD - 20mm CAVITY

CAD REF 7-1 - 20
SCALE 1:2

Celcrete Panel Veneer System
Issue Date: Sept 2012

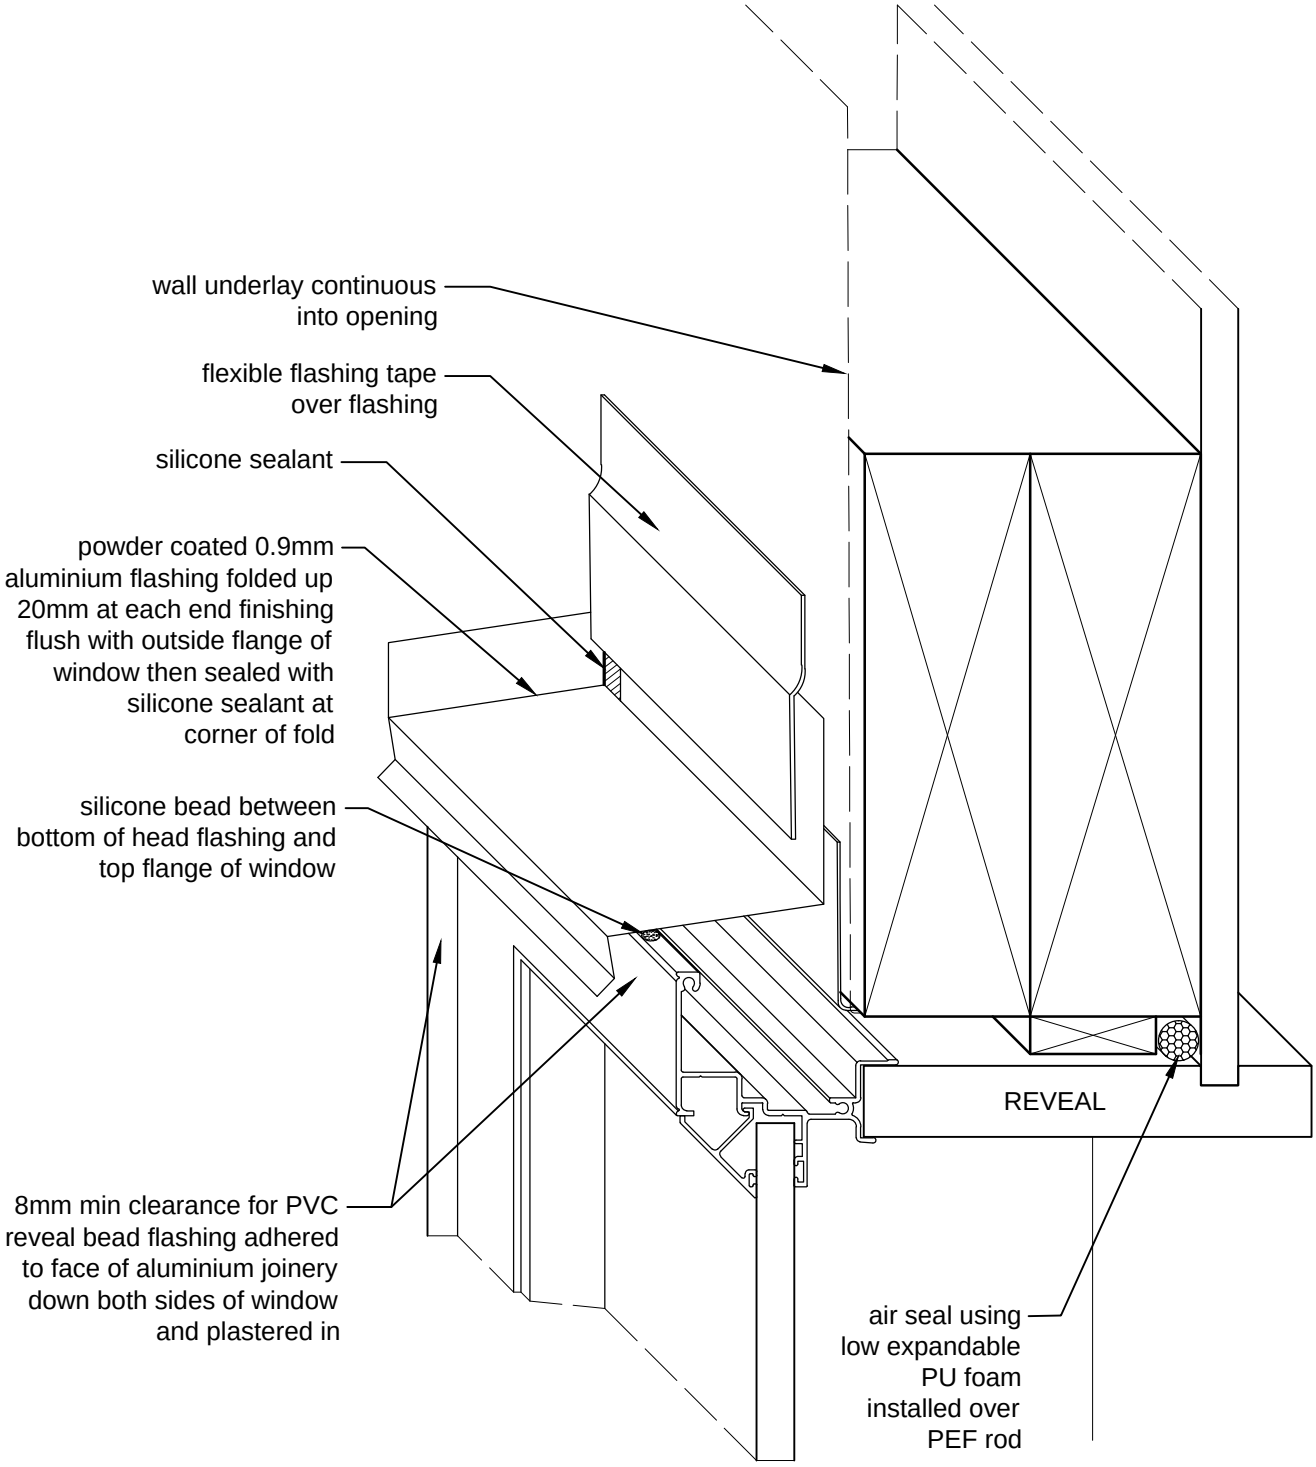


# ALUMINIUM WINDOW HEAD - 20mm CAVITY

CAD REF 7-1-a - 20
N.T.S.

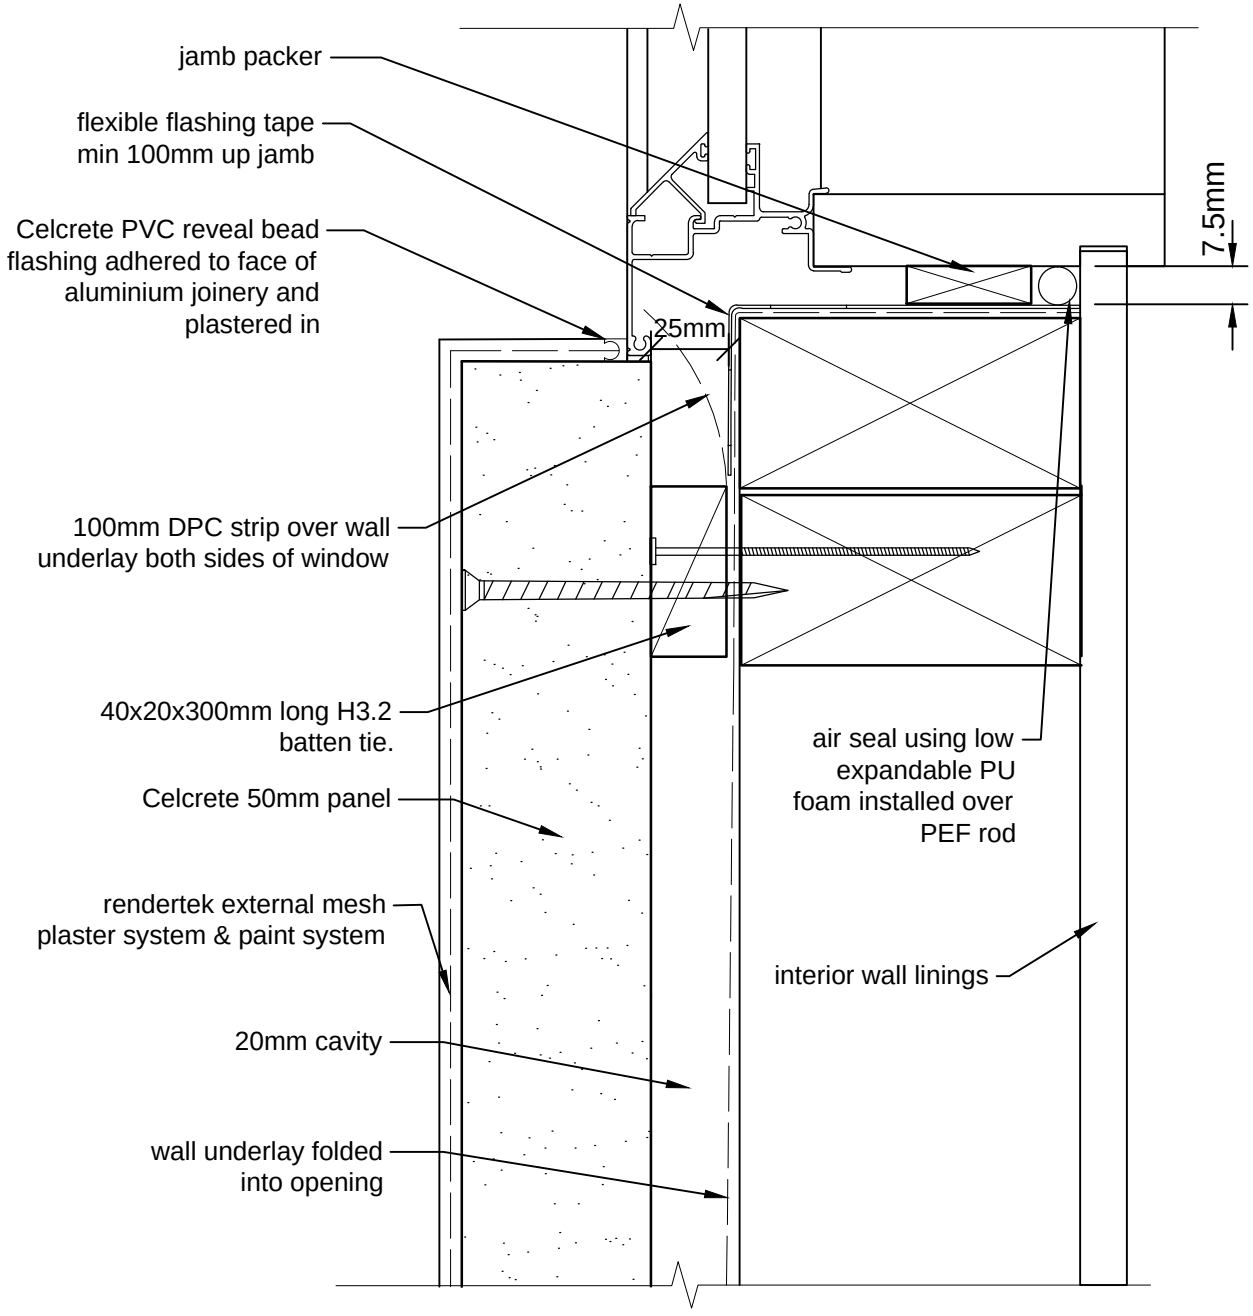


PLAN VIEW

# ALUMINIUM WINDOW JAMB - 20 CAVITY

CAD REF 7-2 - 20

SCALE 1:2

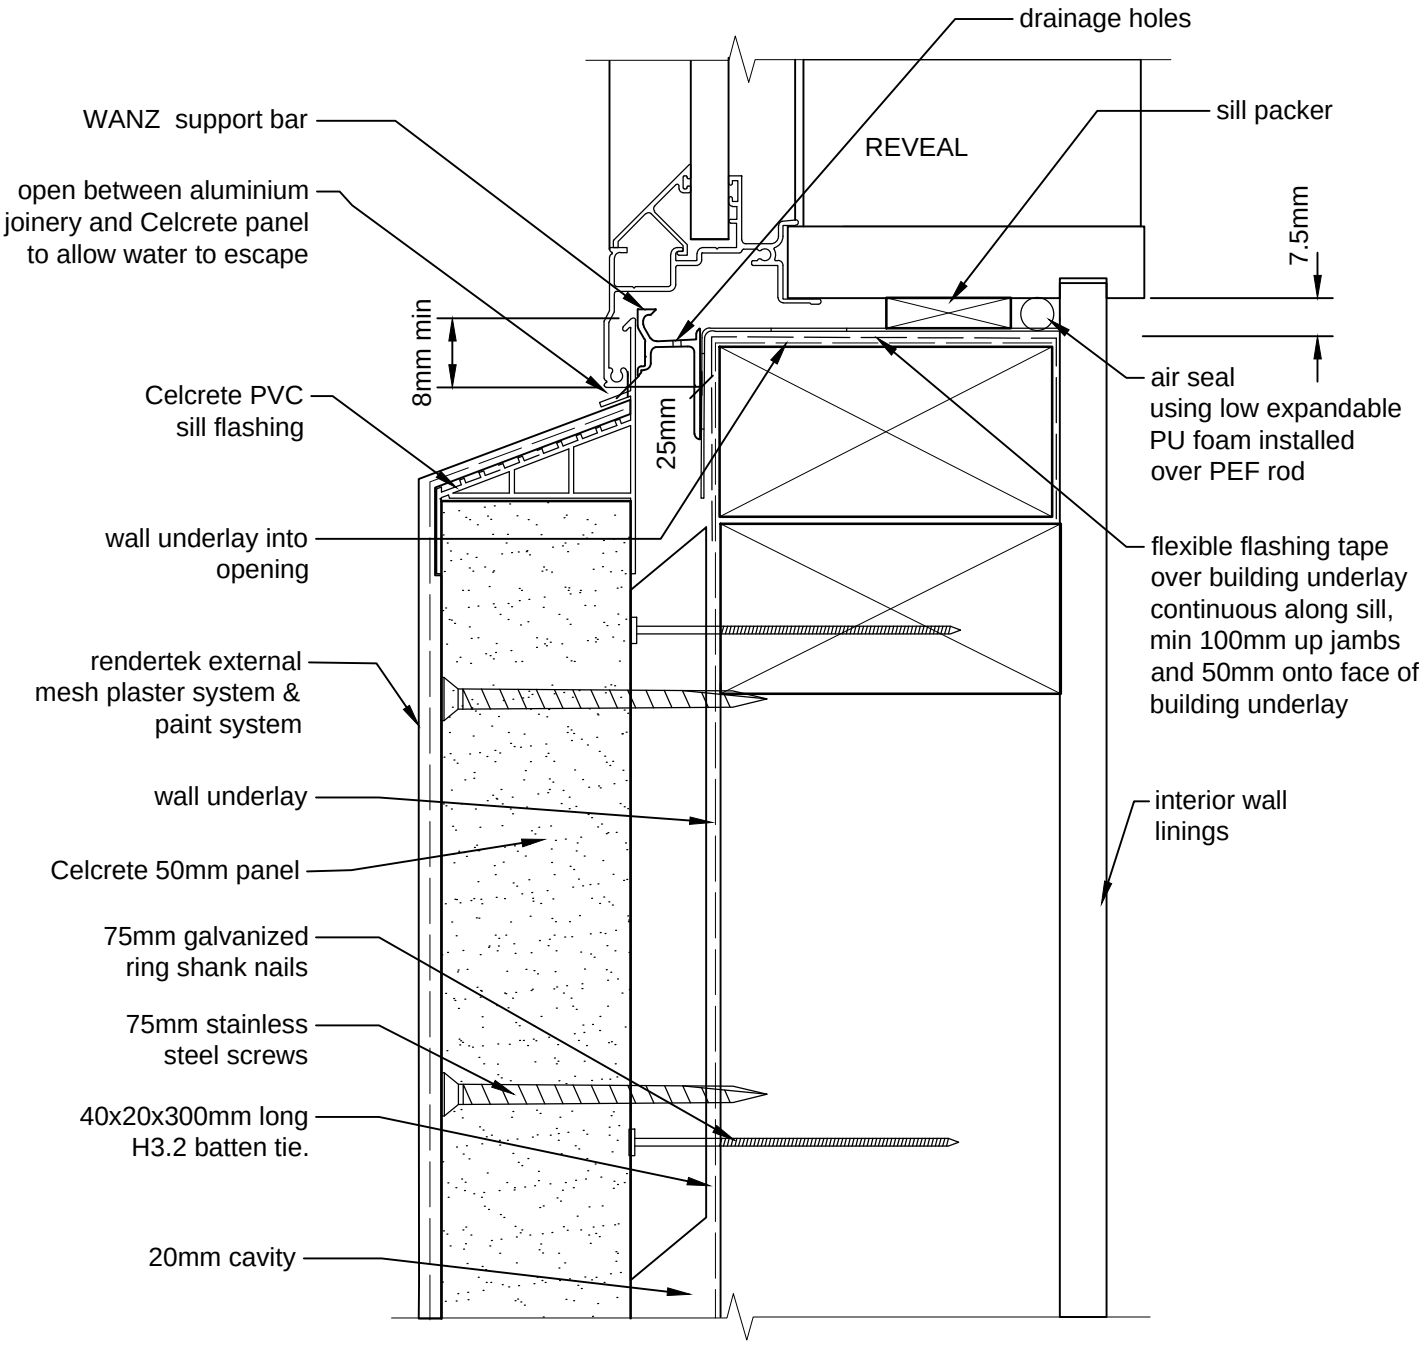


WINDOW FIXING: Refer to E2/AS1 Paragraph 9.1.10.8

# ALUMINIUM WINDOW SILL - 20mm CAVITY

CAD REF 7-3 - 20

SCALE 1:2

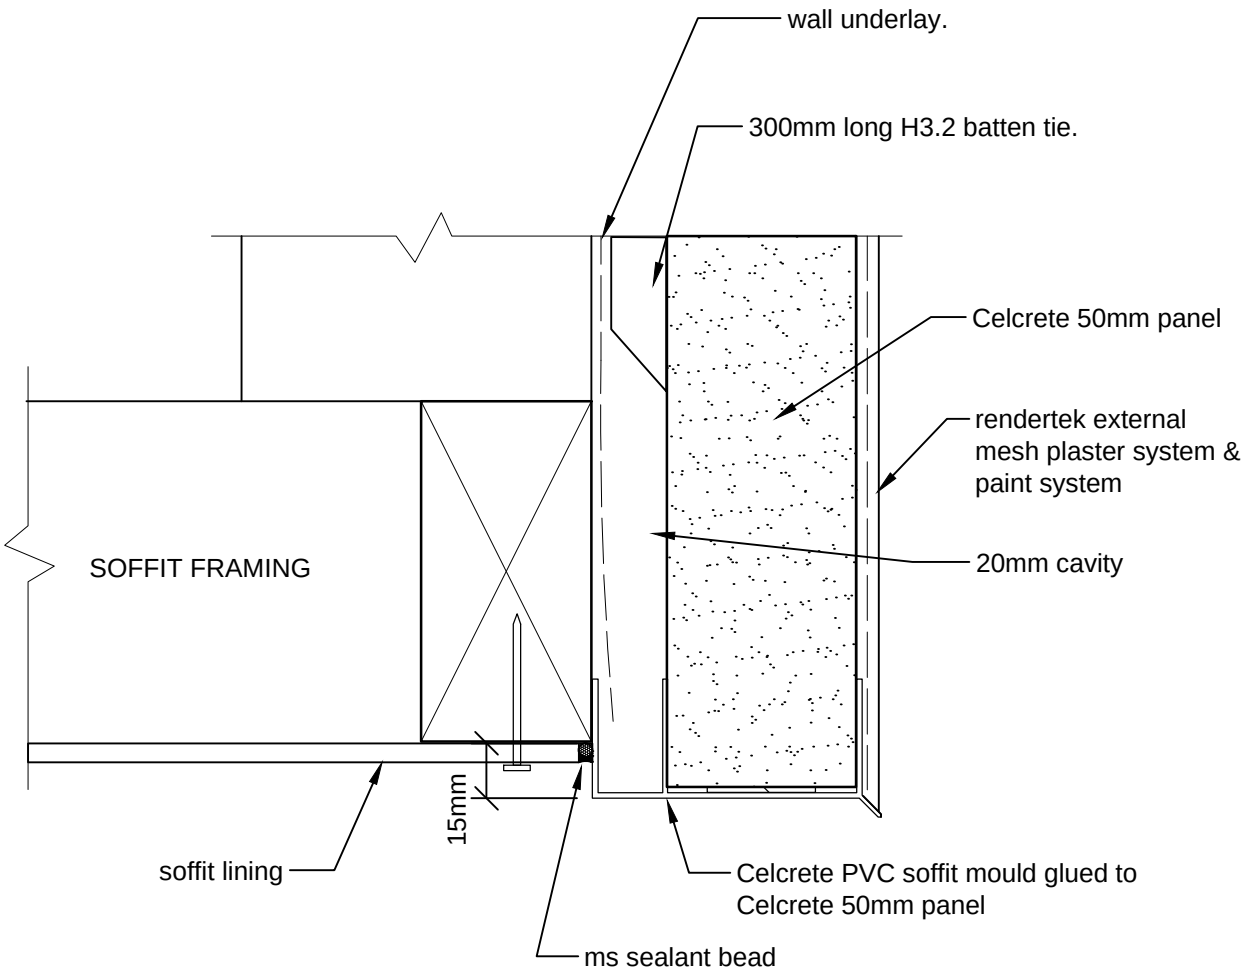


# SOFFIT EDGE DETAIL - 20mm CAVITY

CAD REF 8-2 - 20

SCALE 1:2

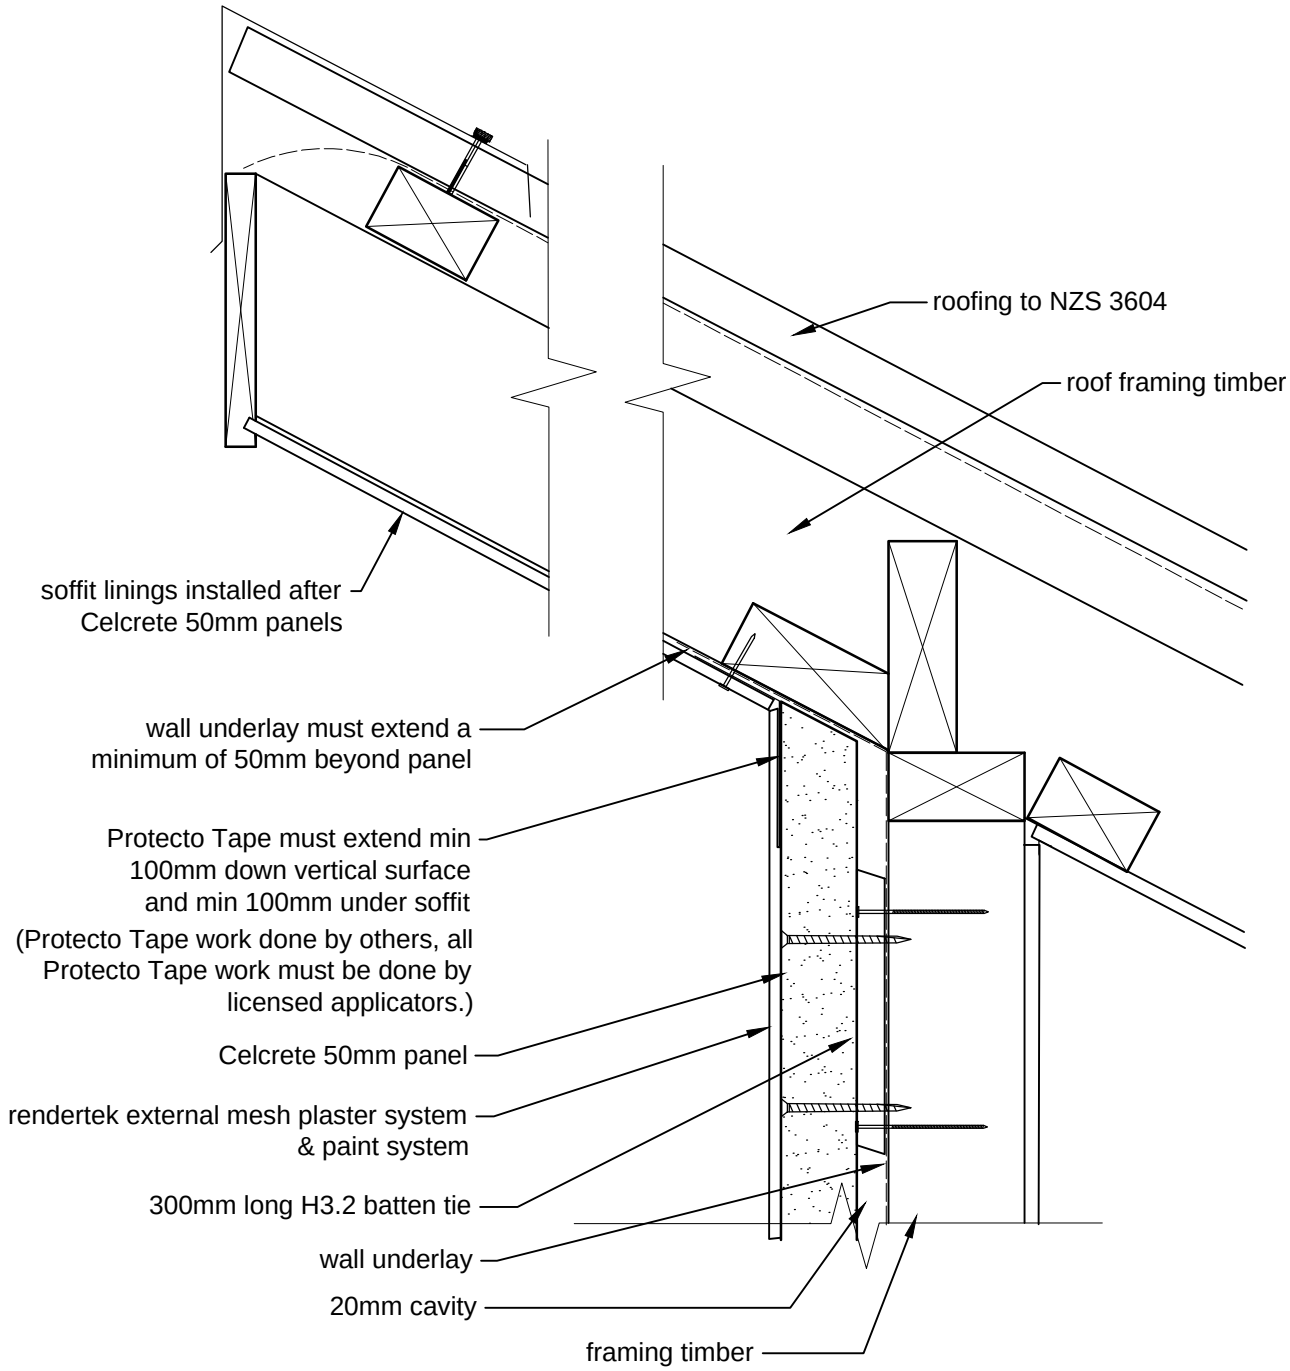


# EXPOSED MONOPLANE ROOF & SOFFIT - CELCRETE PANEL JUNCTION - 20mm CAVITY

CAD REF 8-3 - 20
SCALE 1:5

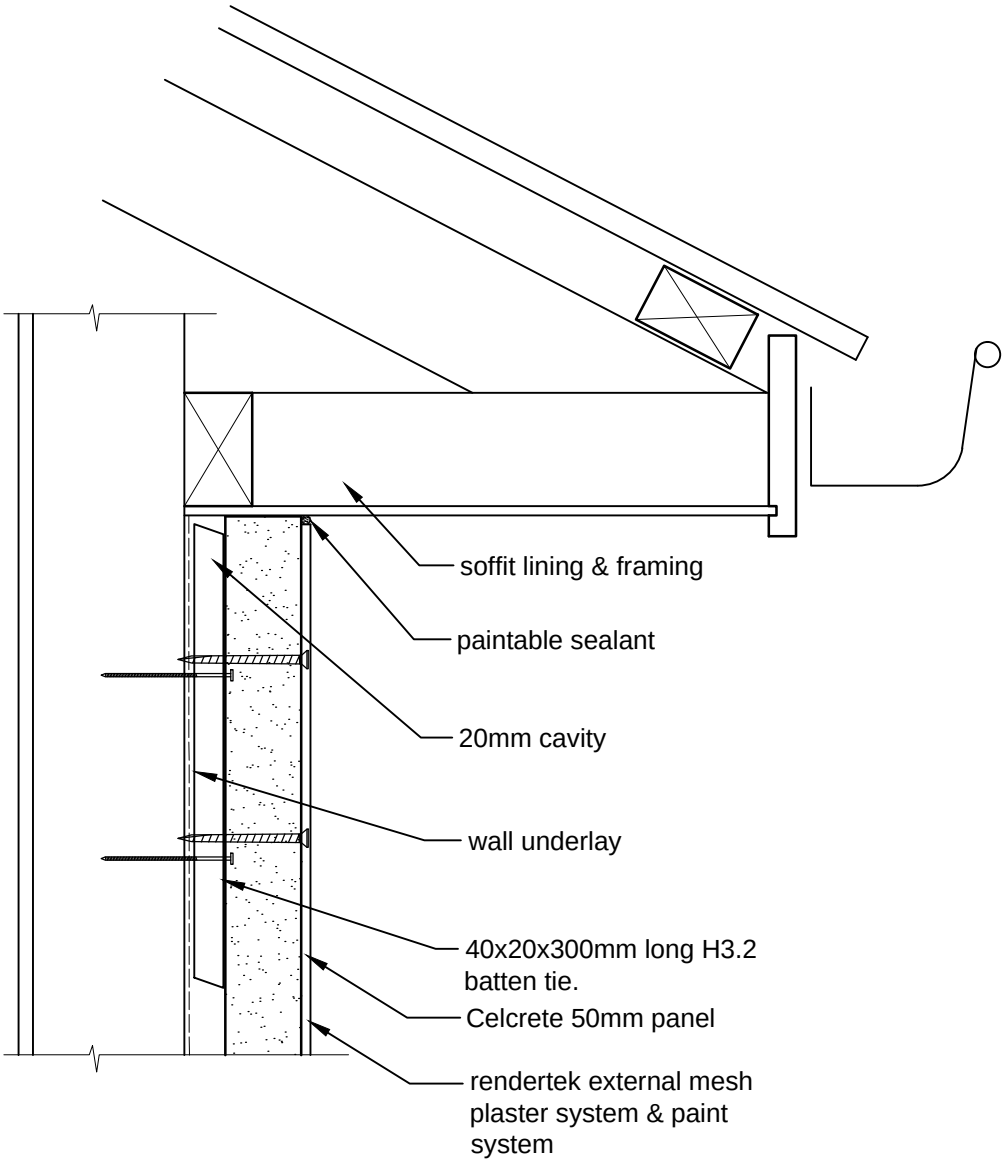


# CELCRETE PANEL SOFFIT EAVES JUNCTION DETAIL - 20mm CAVITY

CAD REF 8-6 - 20
SCALE 1:5

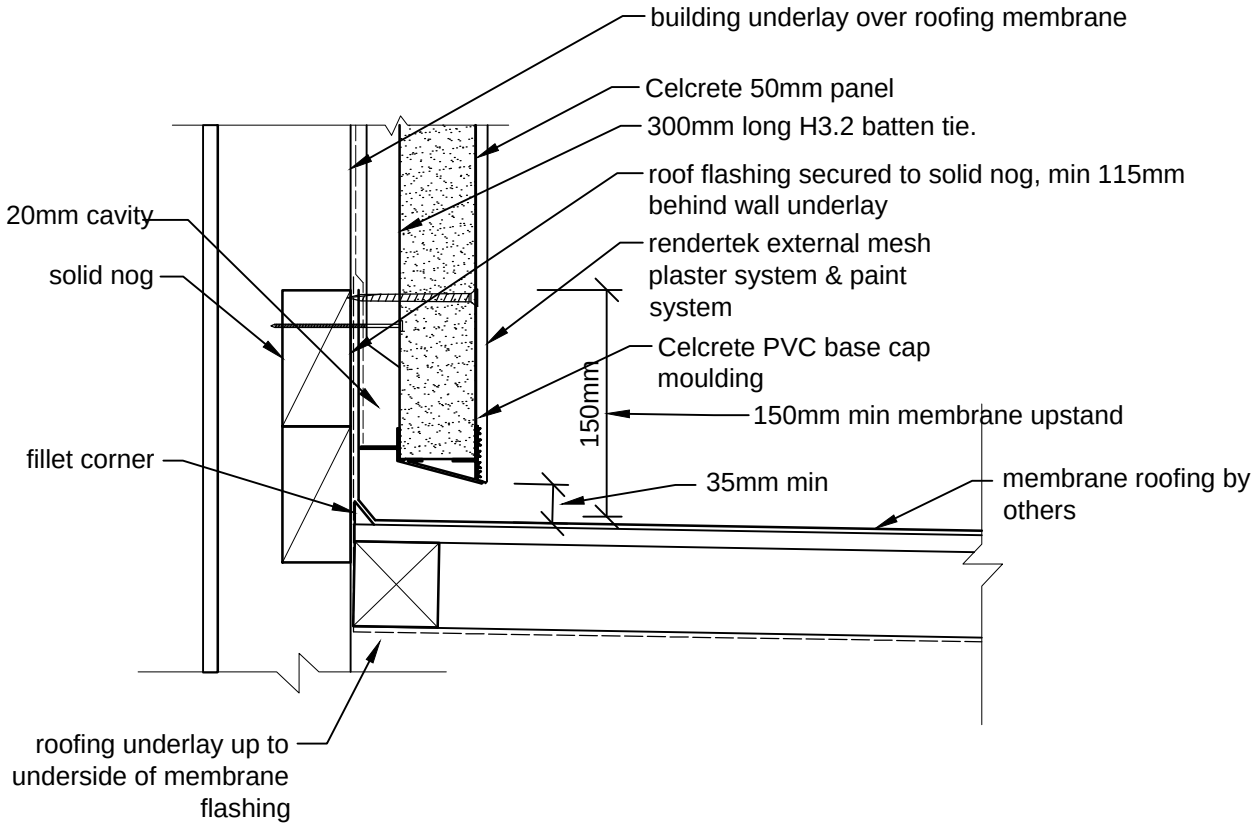


# ROOF/ WALL JUNCTION DETAIL - 20mm CAVITY

CAD REF 8-8 - 20

SCALE 1:5

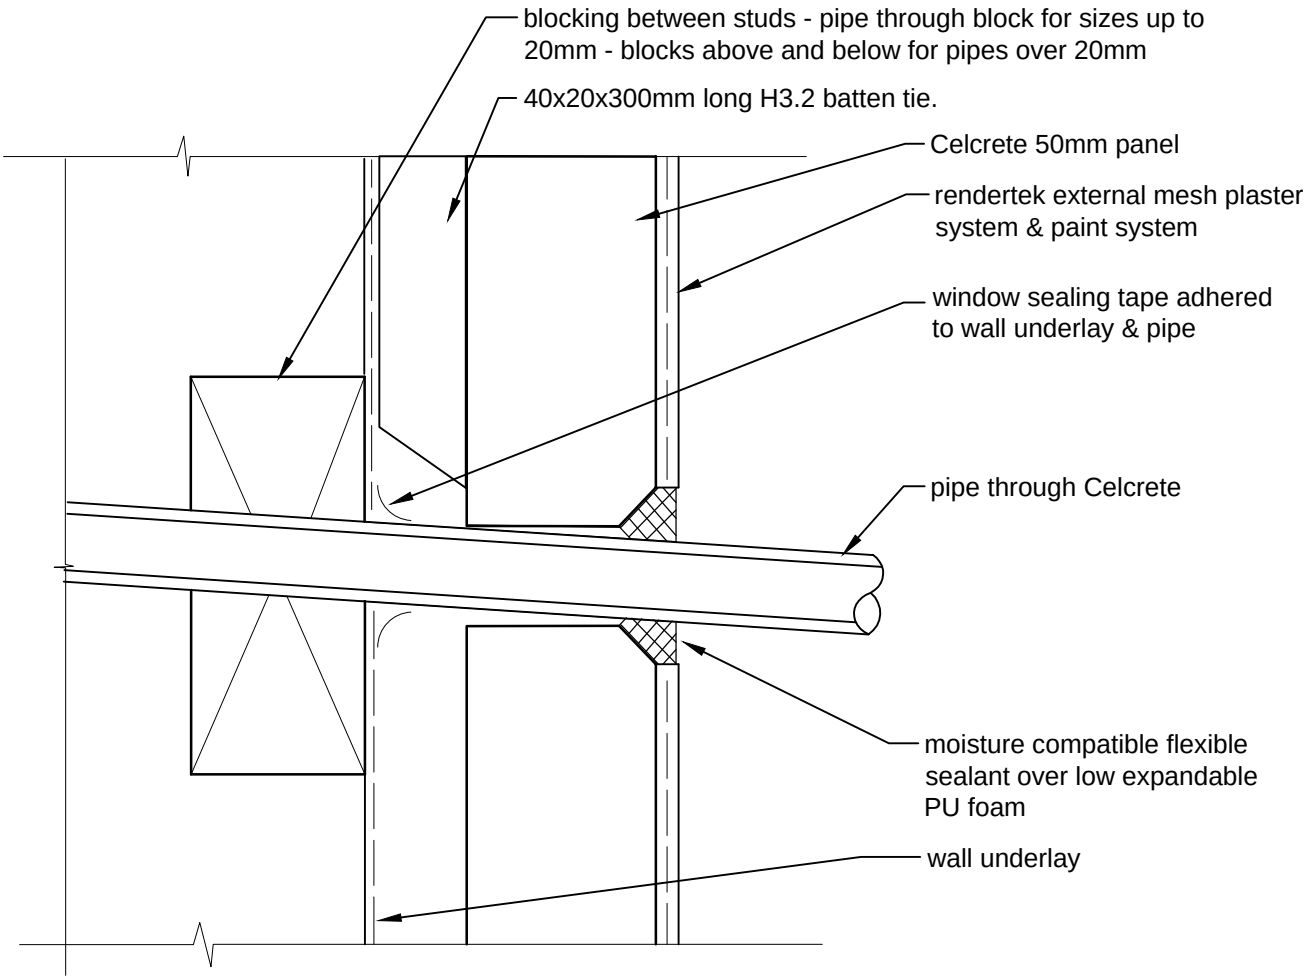


Where cables penetrate cladding, a sleeve or conduit shall be provided and sealed into the celcrete 50mm panel system. All wires that pass through a conduit shall be sealed into position inside the conduit.

# PENETRATION THROUGH CELCRETE WALL CLADDINGS FOR PIPES - 20mm CAVITY

[Where possible, provide outwards fall to pipework for water run-off]

CAD REF 11-1 - 20

SCALE 1:2

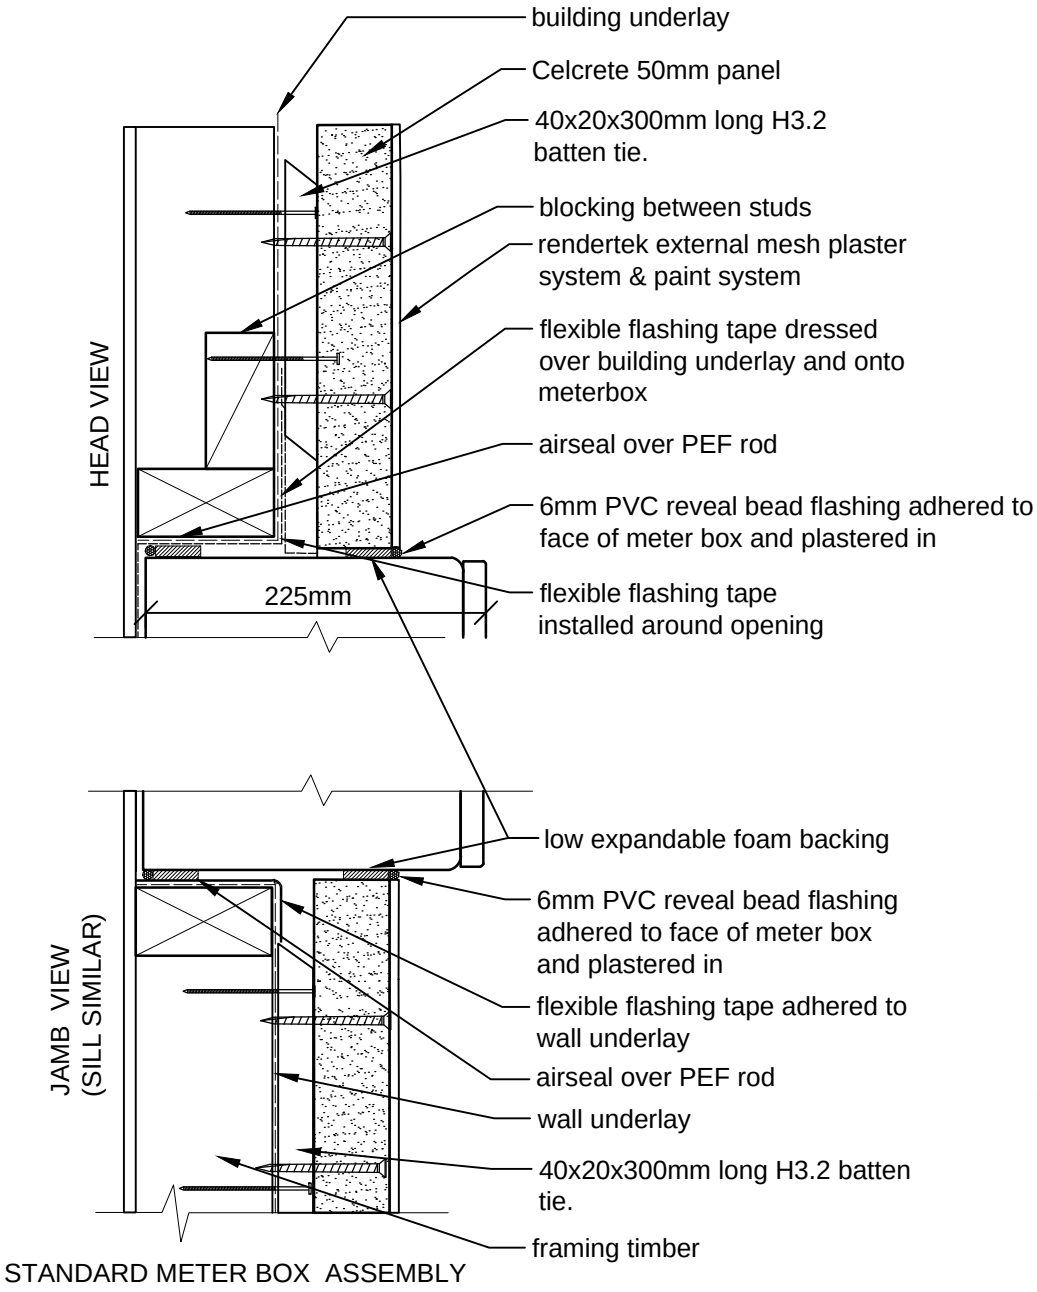


STANDARD METER BOX ASSEMBLY

COMMENT:
Where possible, meter-boxes should be located in sheltered areas of the building, such as a porch, or be installed behind a weatherproof glazed panel.

When installing window tape apply pressure
along entire surface for a good bond to wall and Meter box surfaces.

Care must be taken to ensure that when using low expandable PU foam excess foam is cut off. A moisture compatible flexible sealant is to be spread over the exposed foam edge .

Detail tape may need to be used around the corners of the meterbox
to ensure weathertightness.

# PENETRATION THROUGH CELCRETE WALL CLADDINGS FOR METER BOXES - 20mm CAVITY

CAD REF 11-2 - 20
SCALE 1:5 & 1:10

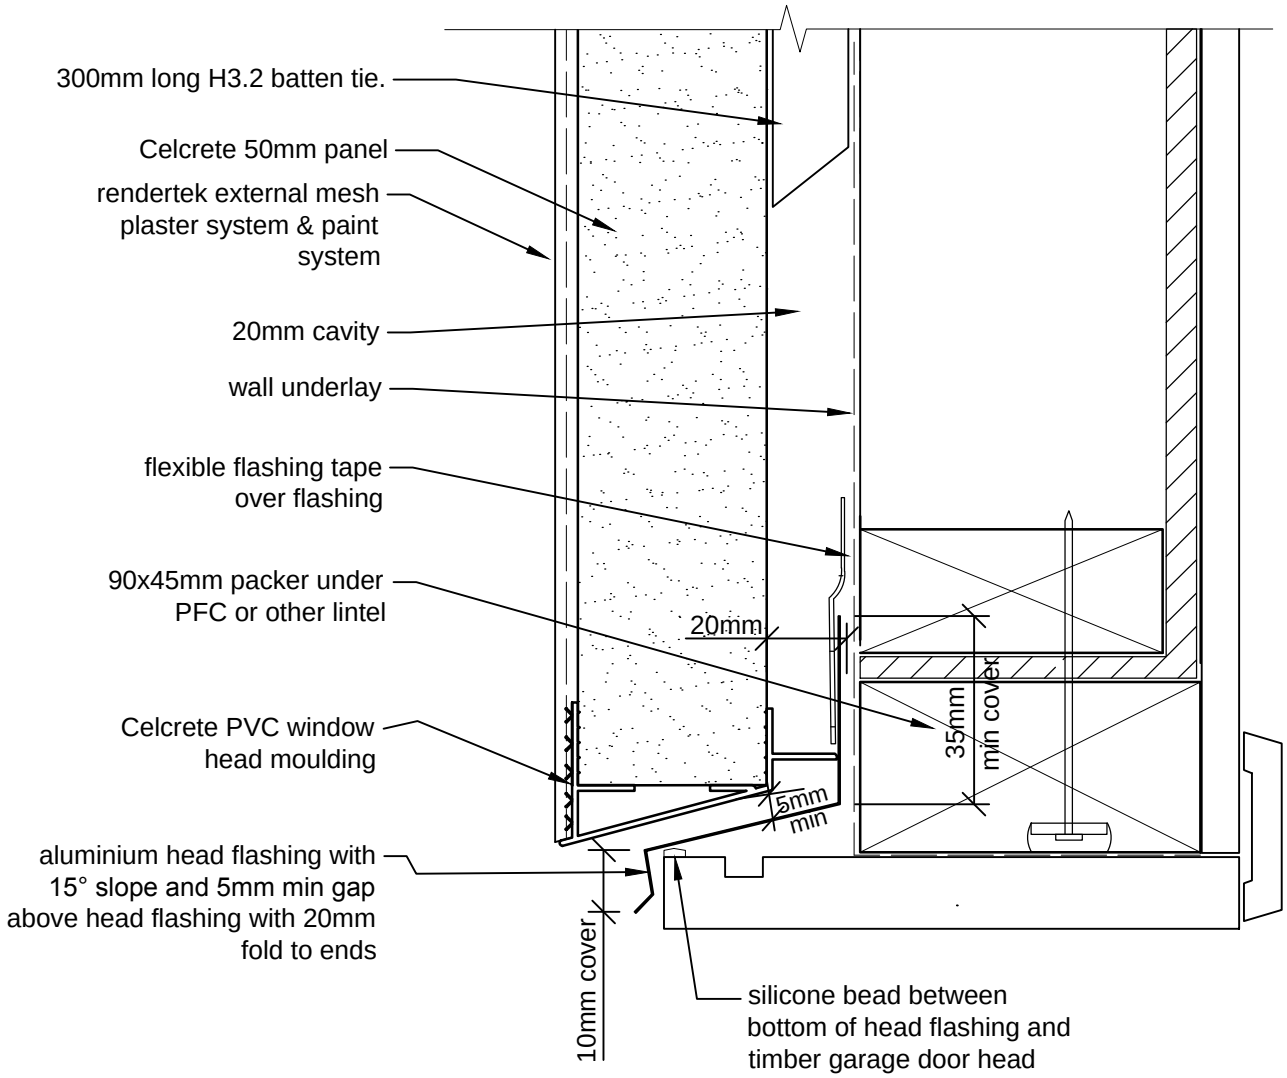


# TIMBER GARAGE DOOR HEAD DETAIL - 20mm CAVITY

SECTIONAL VIEW OF GARAGE DOOR-HEAD

CAD REF 13-1 - 20
SCALE 1:2

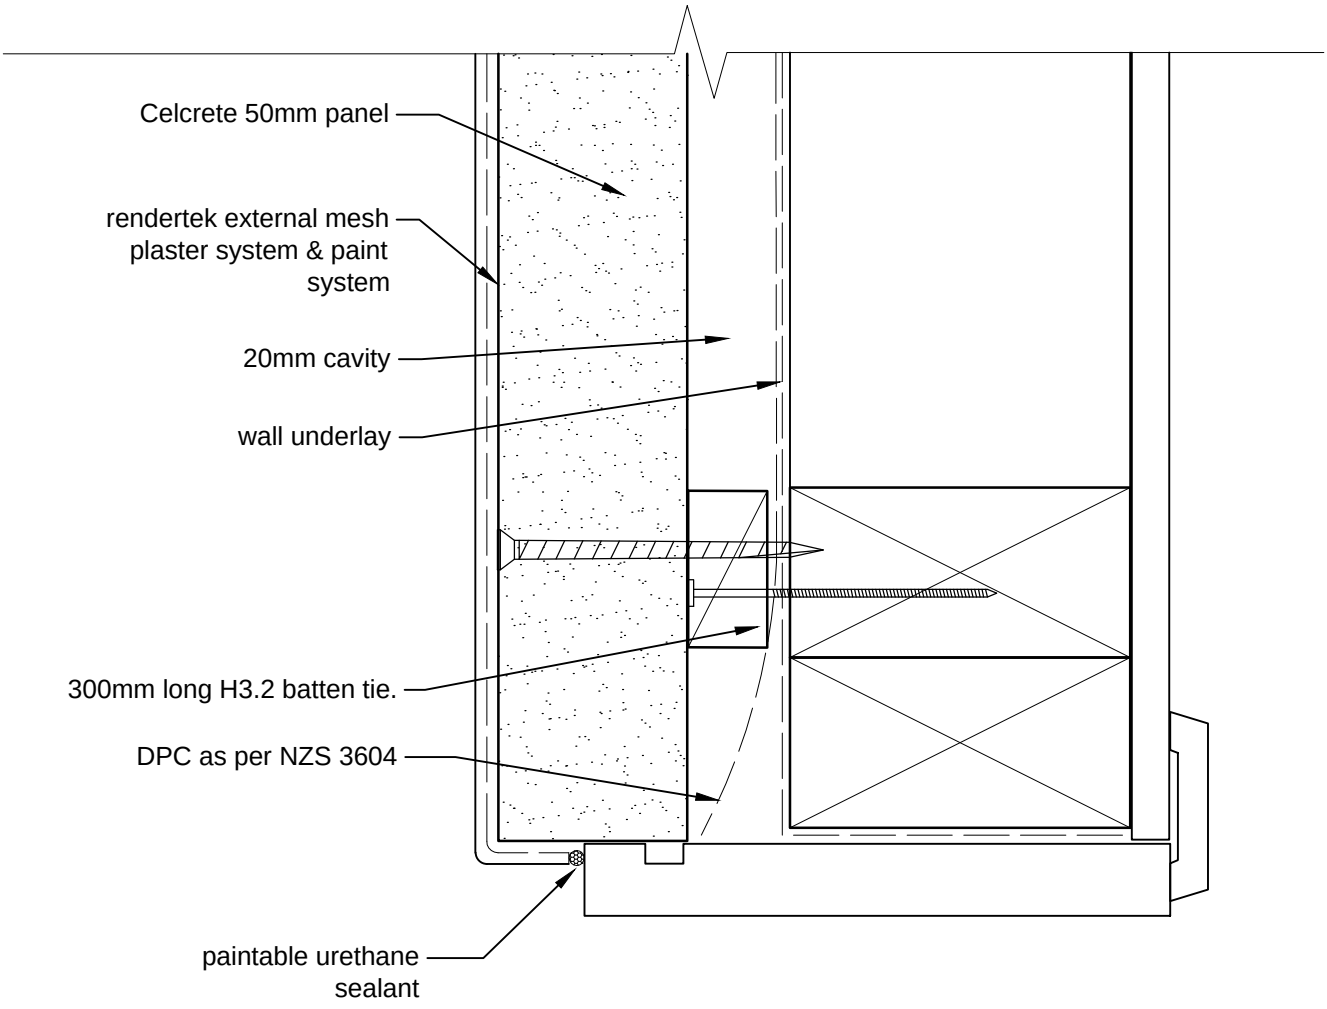


# STD TIMBER JAMB GARAGE DOOR DETAIL - 20mm CAVITY

PLAN VIEW OF JAMB

CAD REF 13-2 - 20

SCALE 1:2

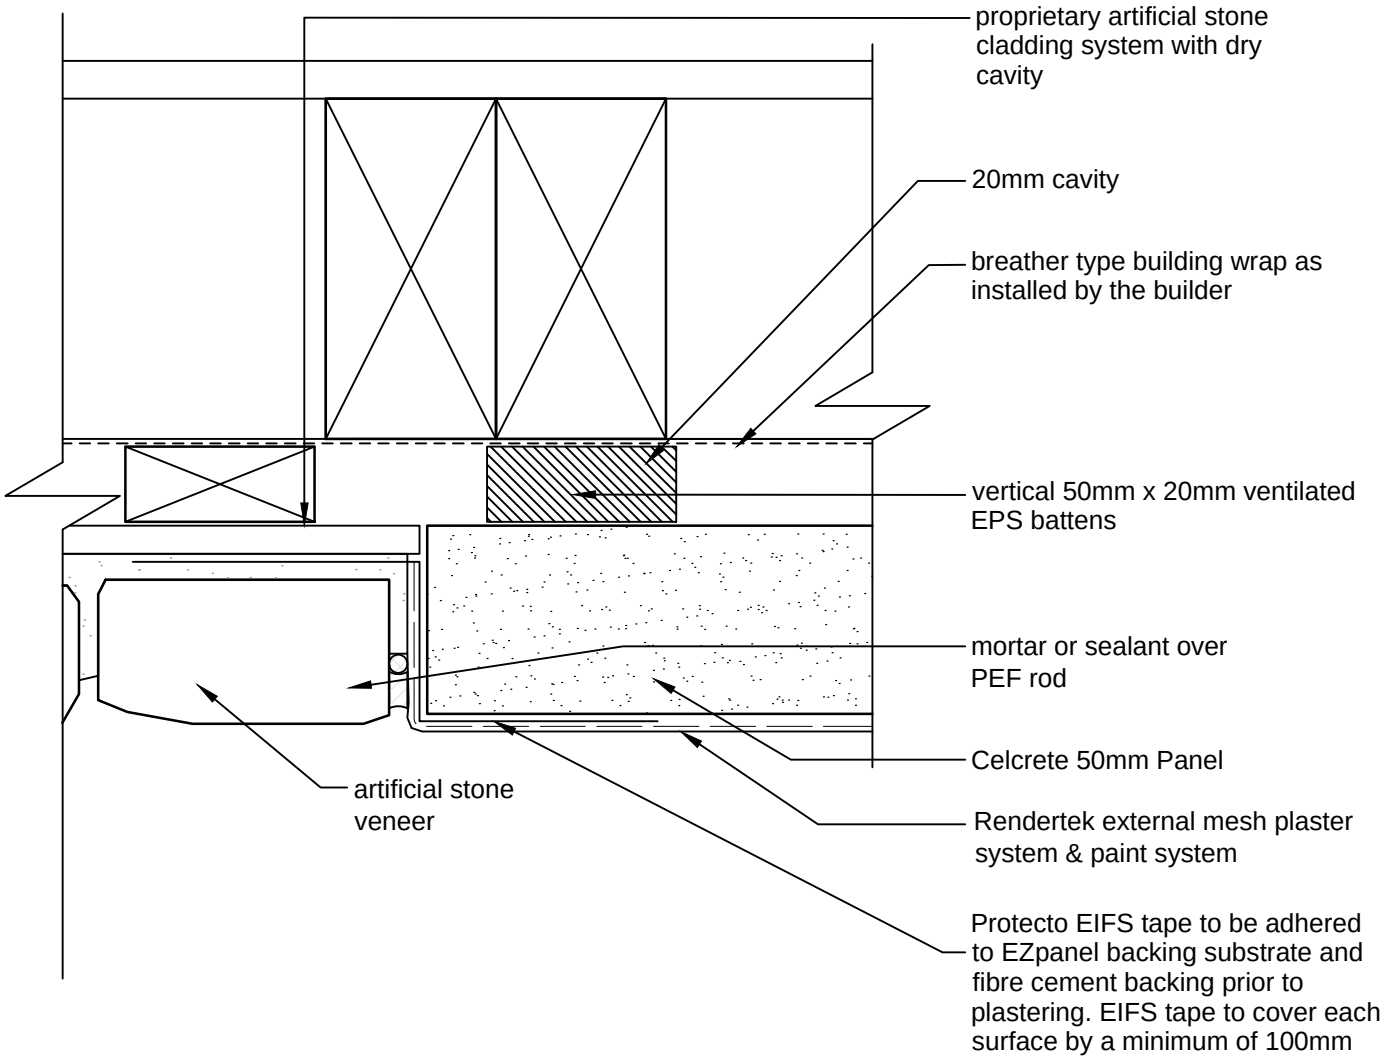


# VERITCAL JOINT ARTIFICIAL STONE VENEER - 20mm CAVITY

PLAN VIEW OF JOINT

CAD REF 13-3 - 20
SCALE 1:2